




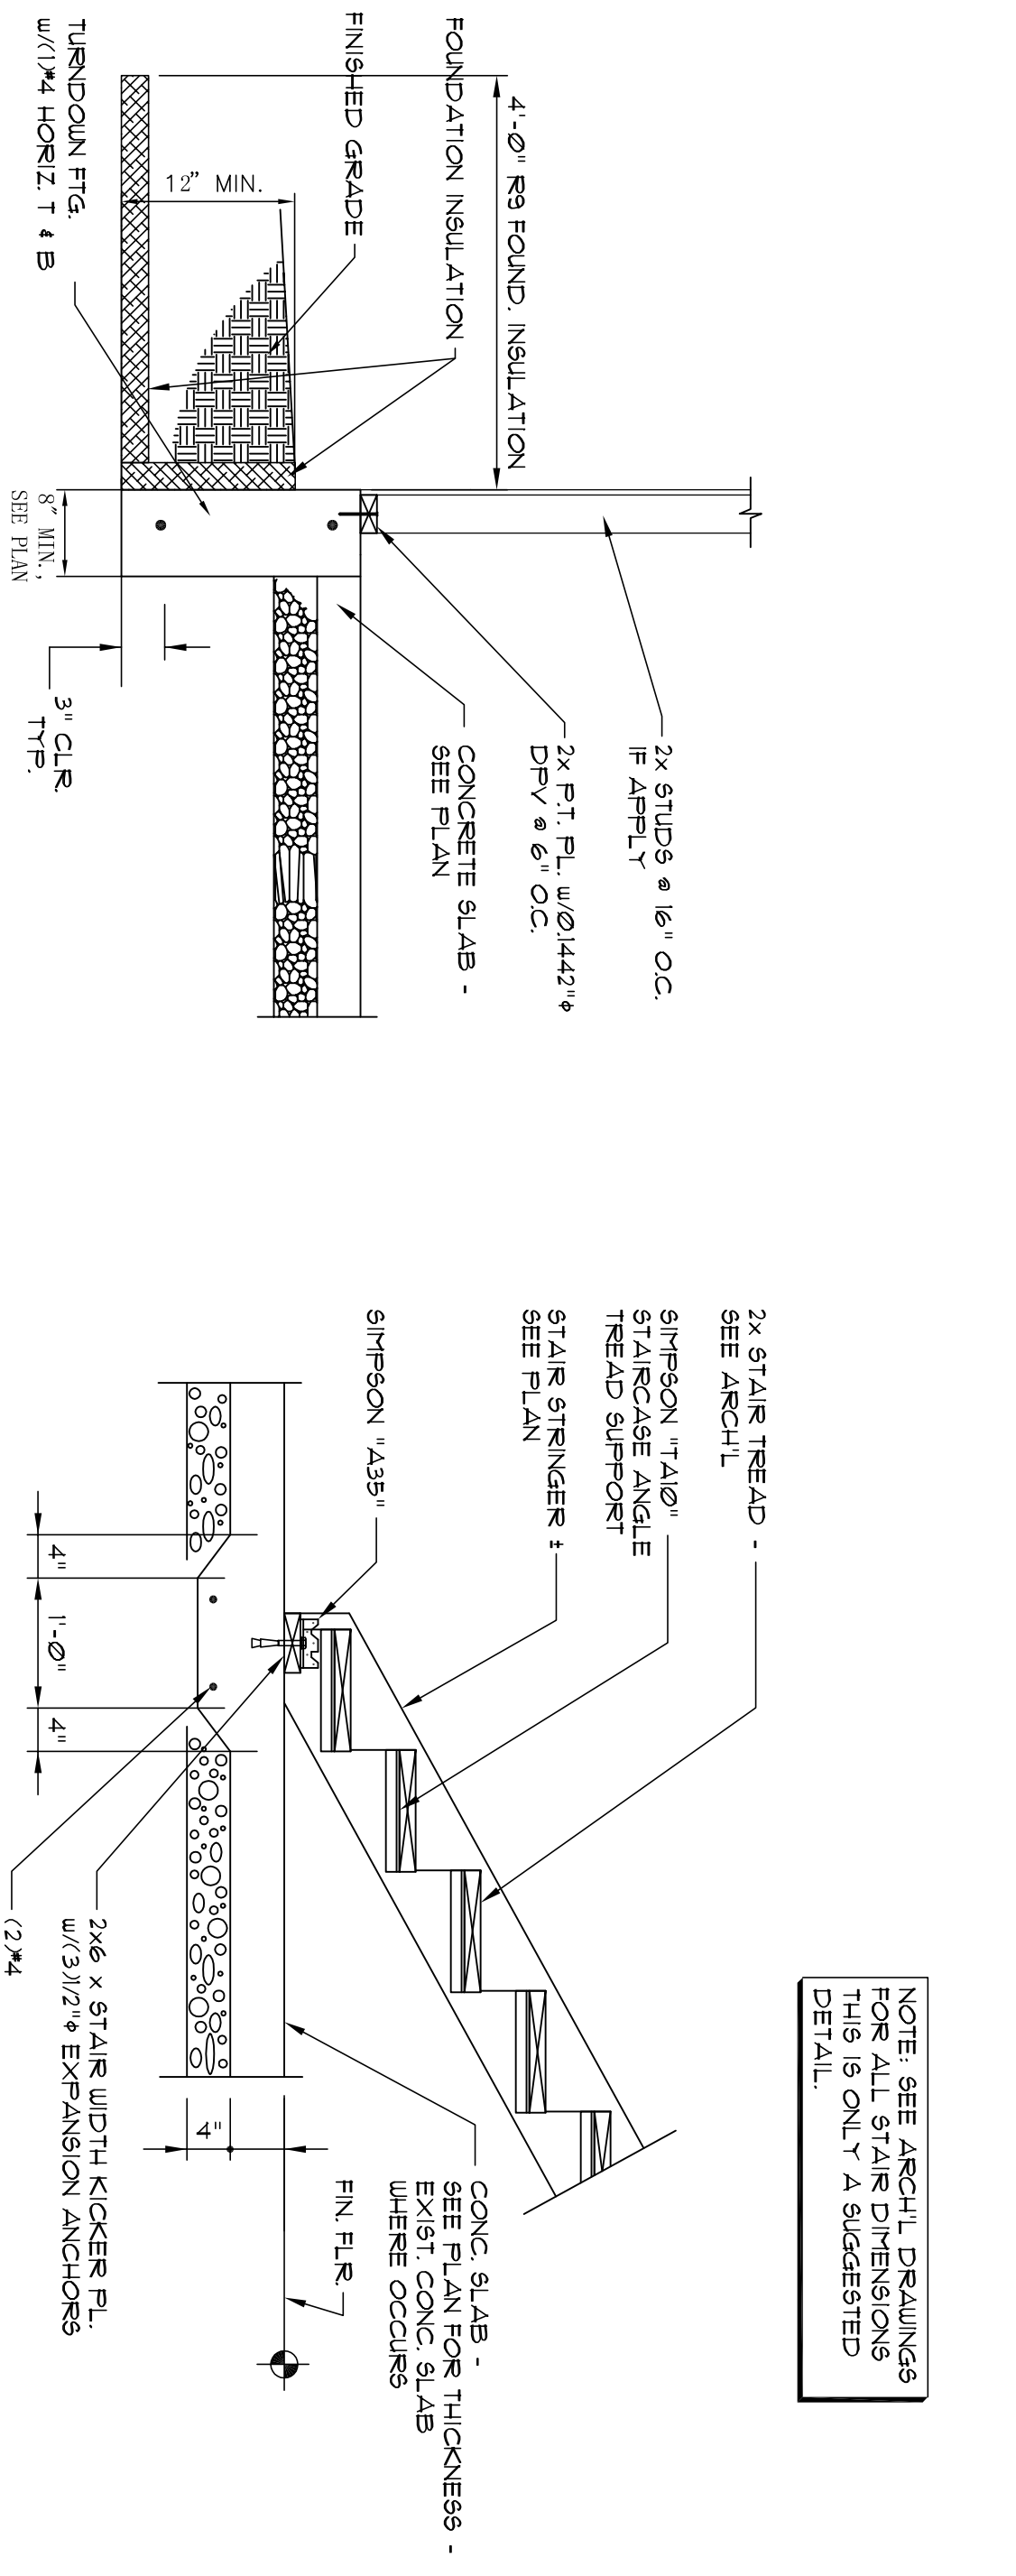


10 TYPICAL WOOD STAIR-CONC. SLAB CONN.

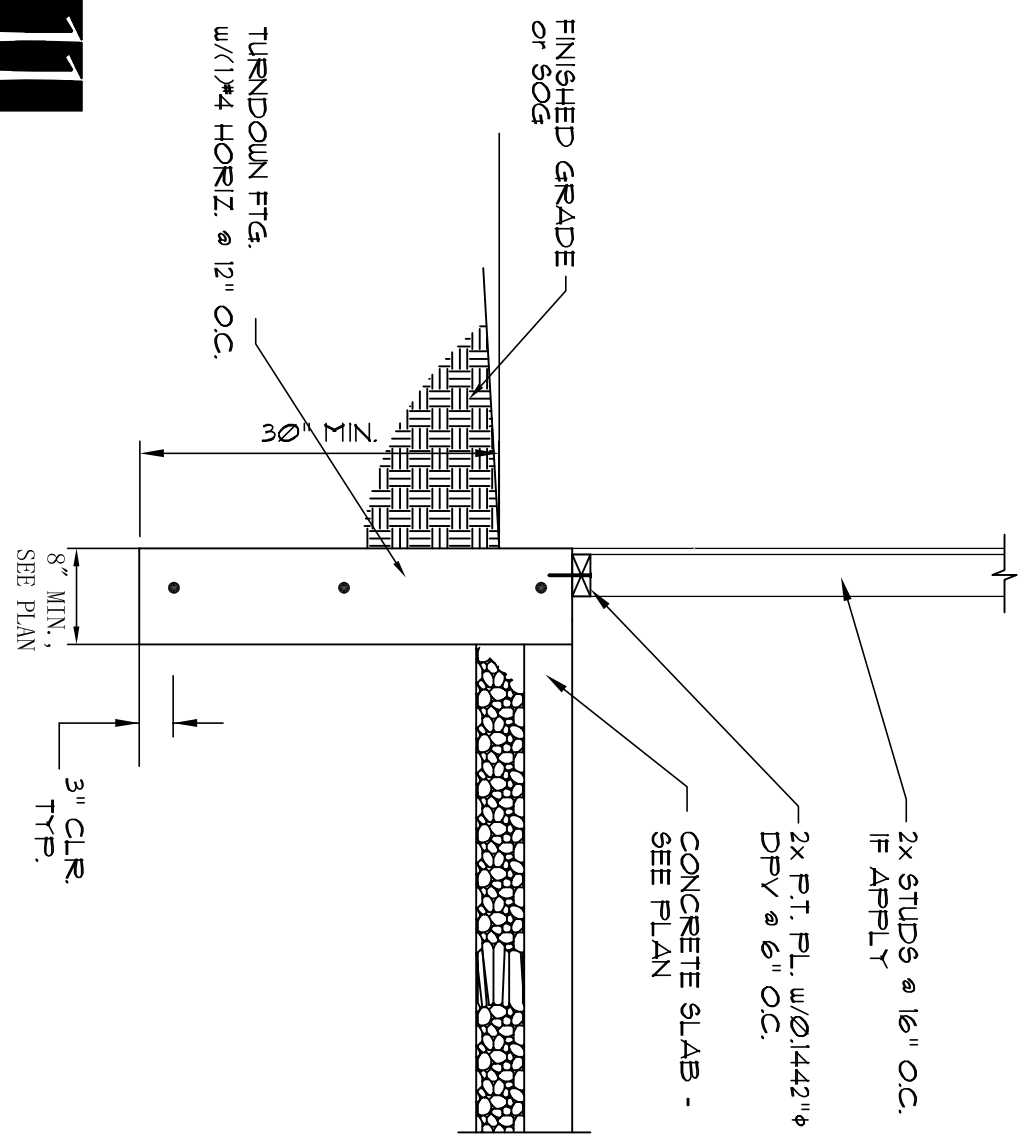


11 TYPICAL CONC. WALL REINF.

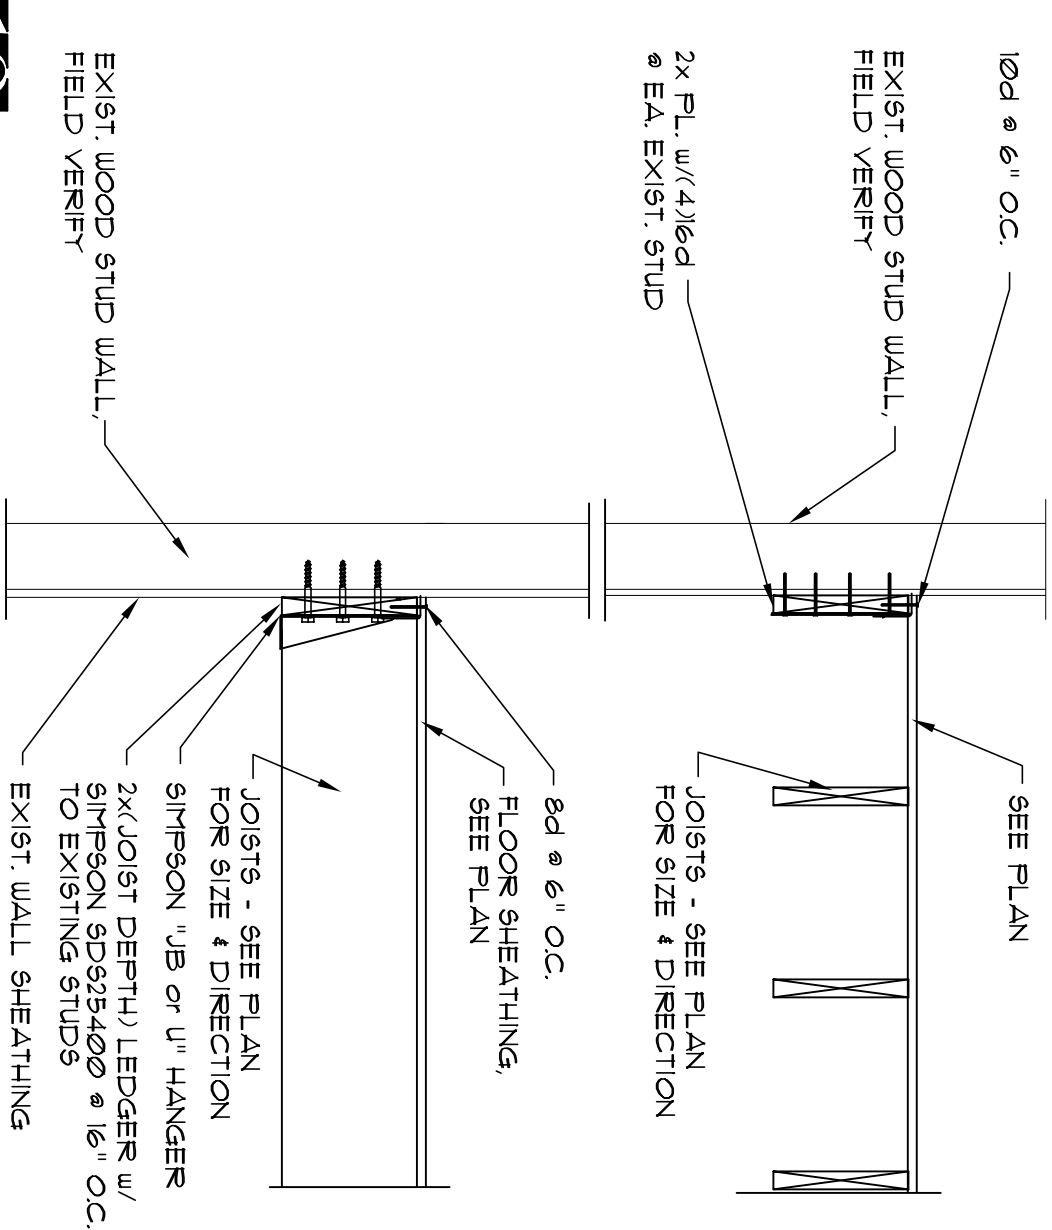


12 TYPICAL CONC. WALL REINF.

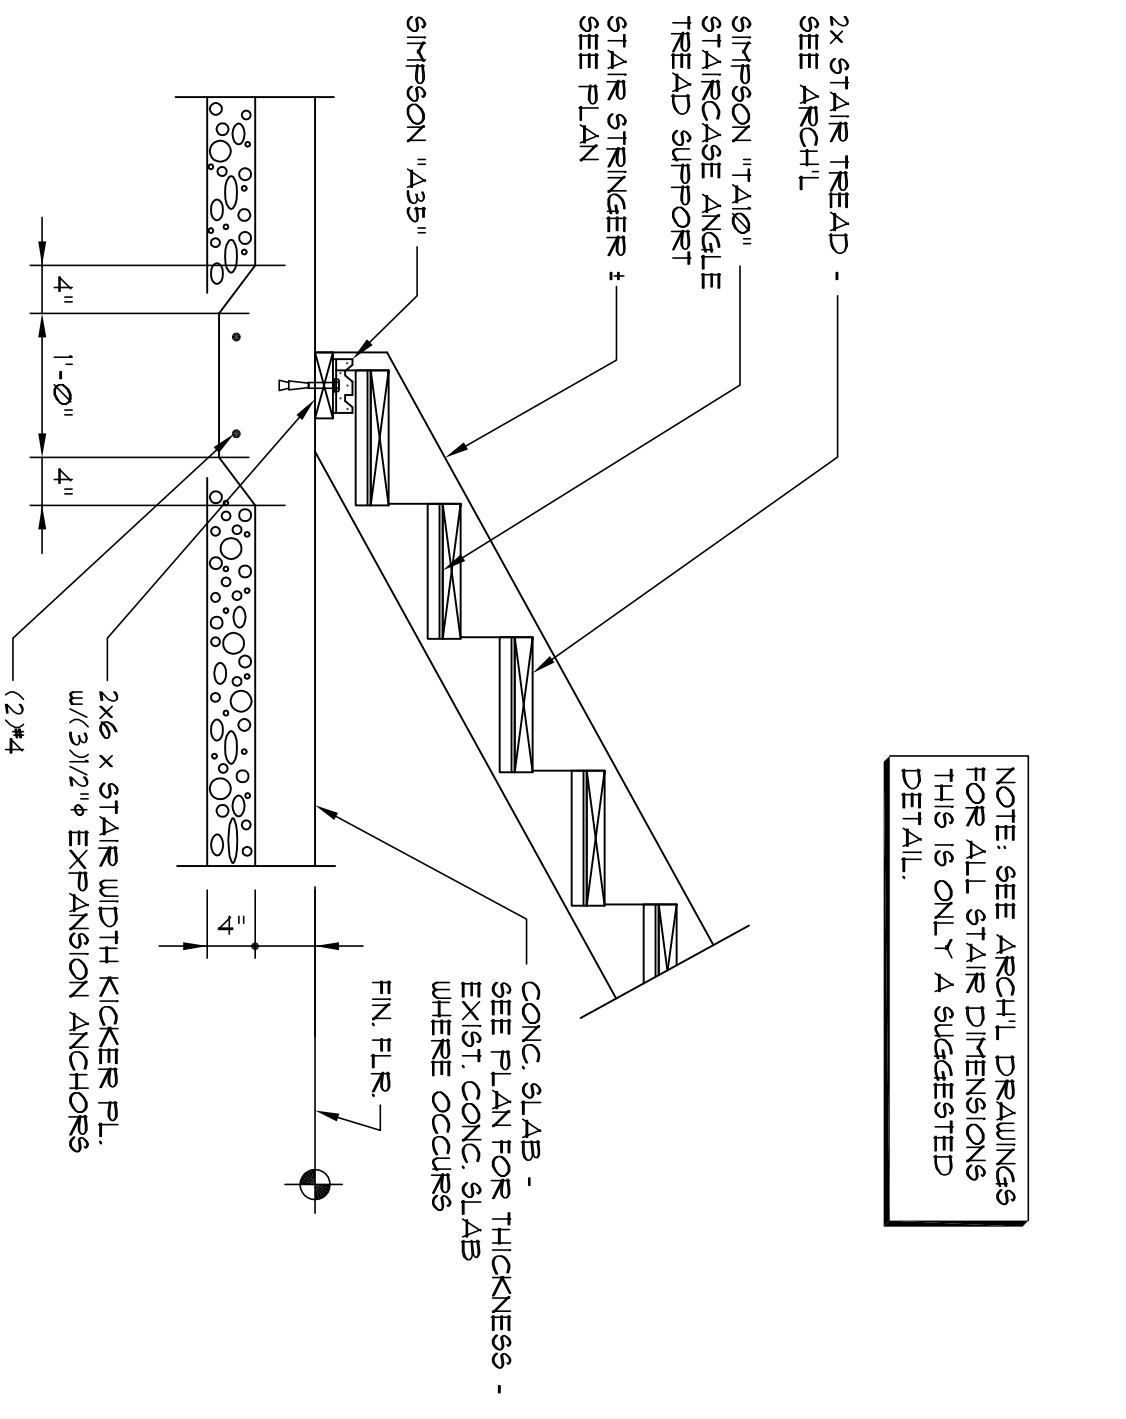


7 TYPICAL WOOD STAIR-CONC. SLAB CONN.

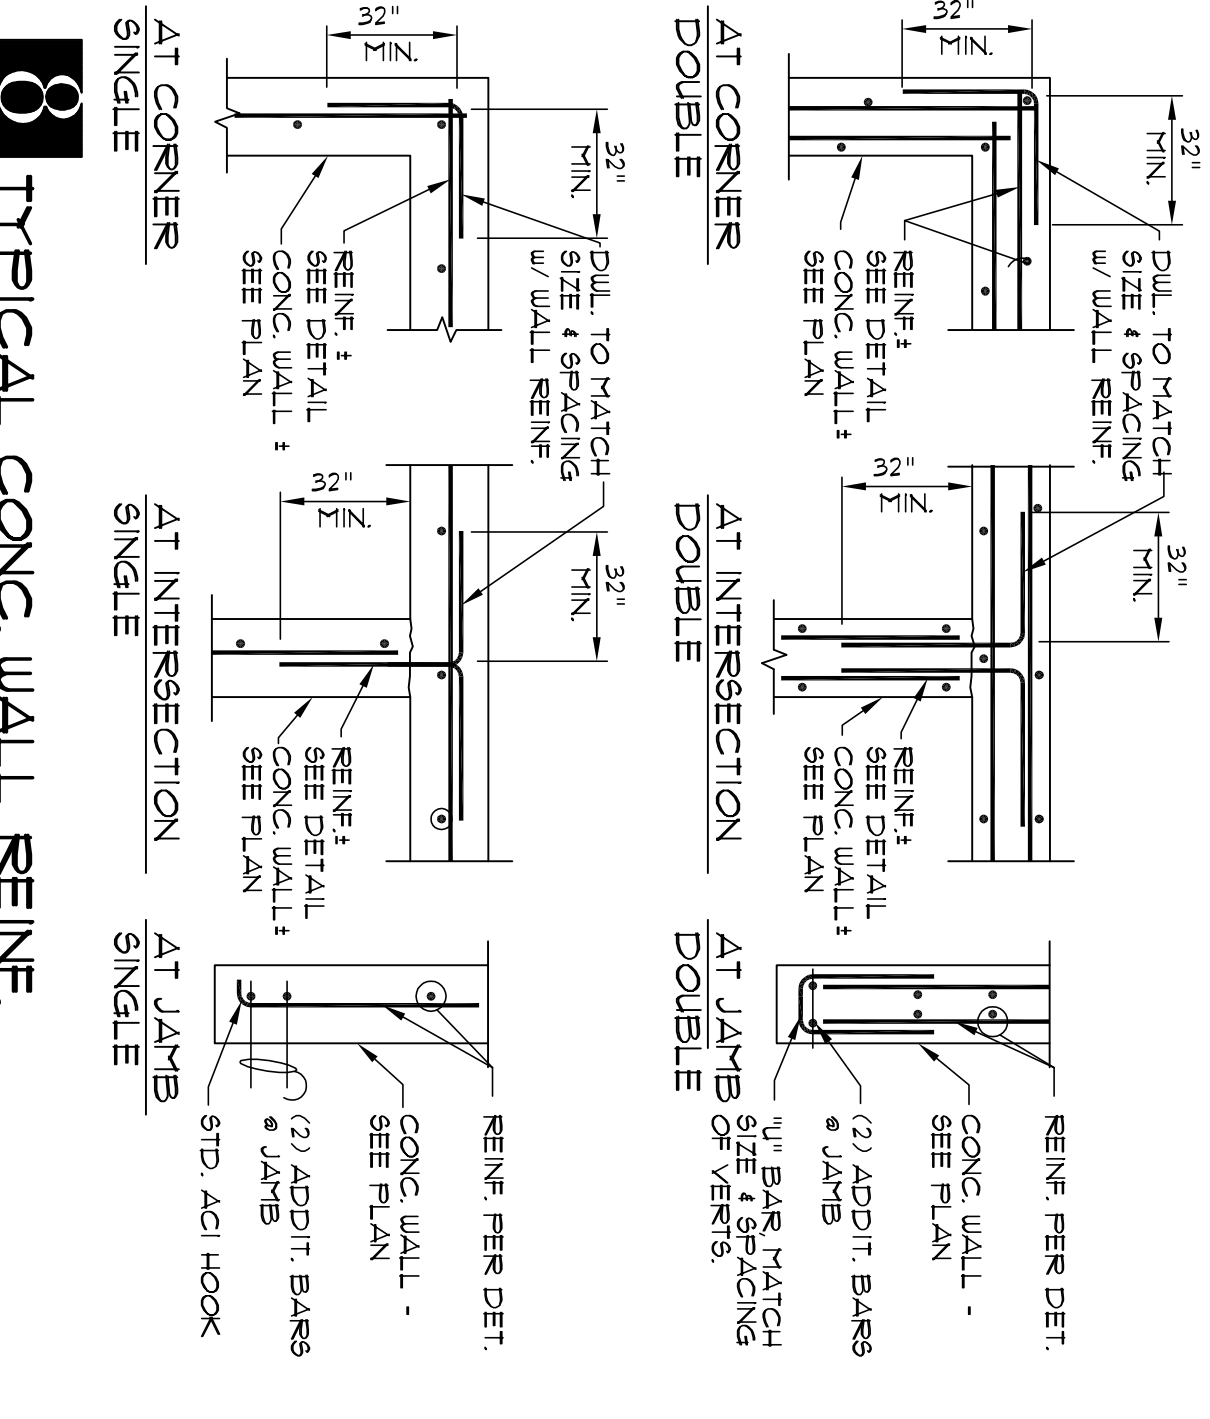


8 TYPICAL CONC. WALL REINF.

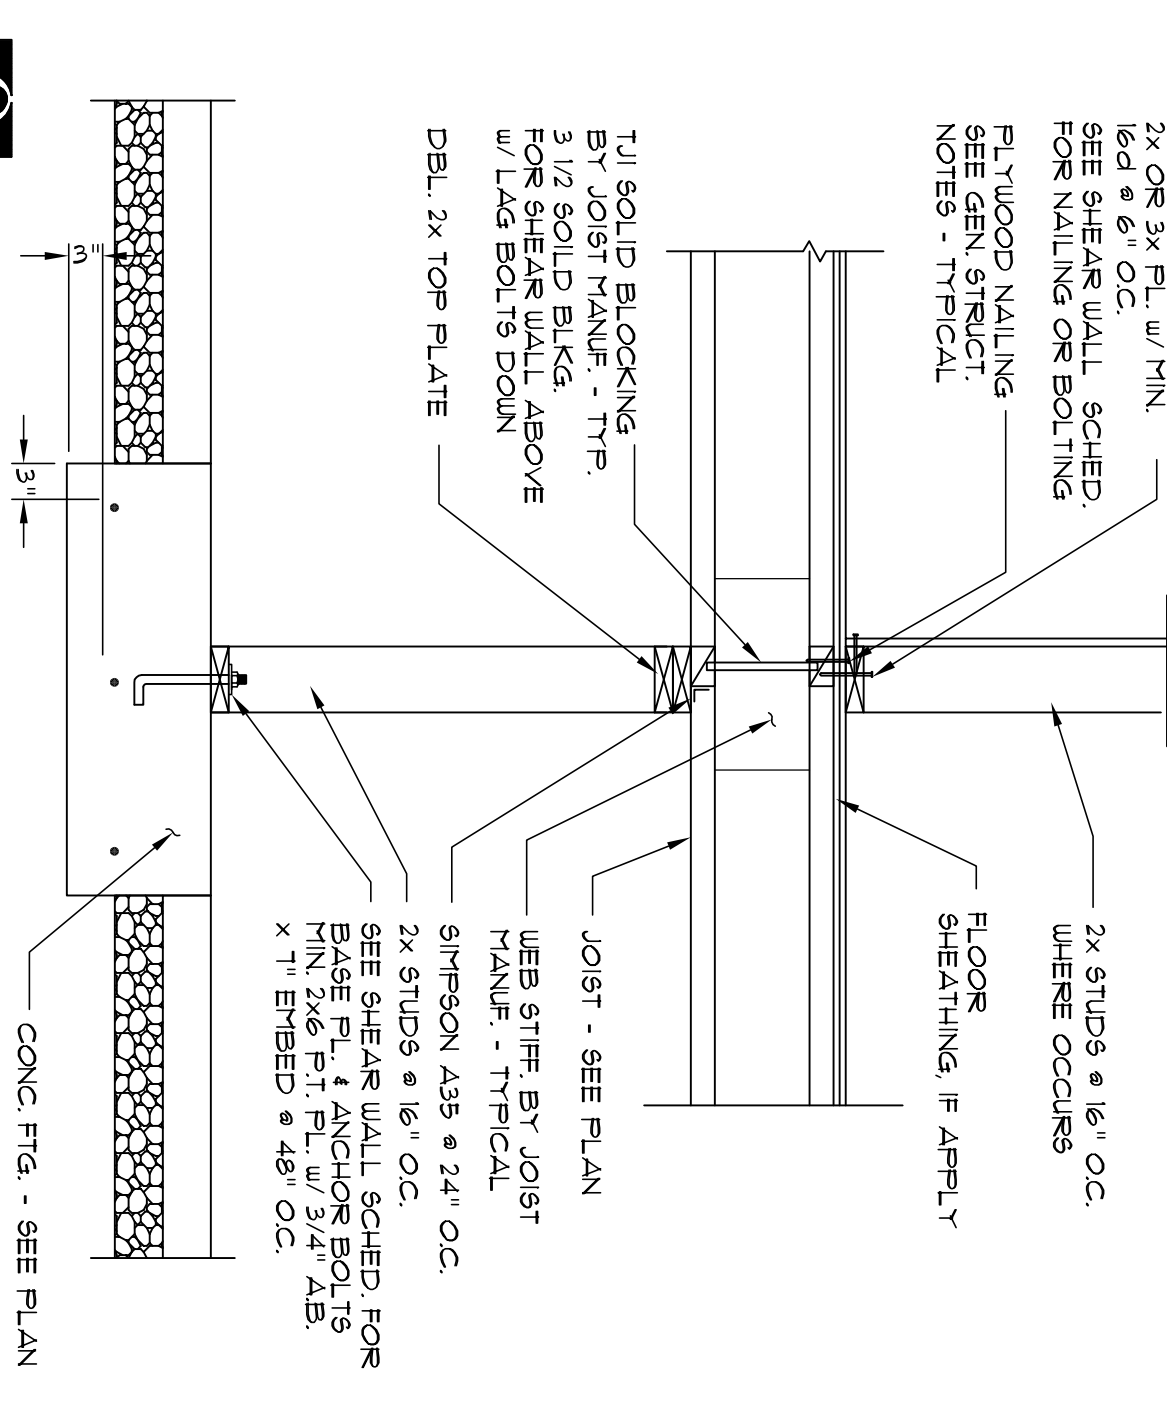


9 TYPICAL CONC. WALL REINF.

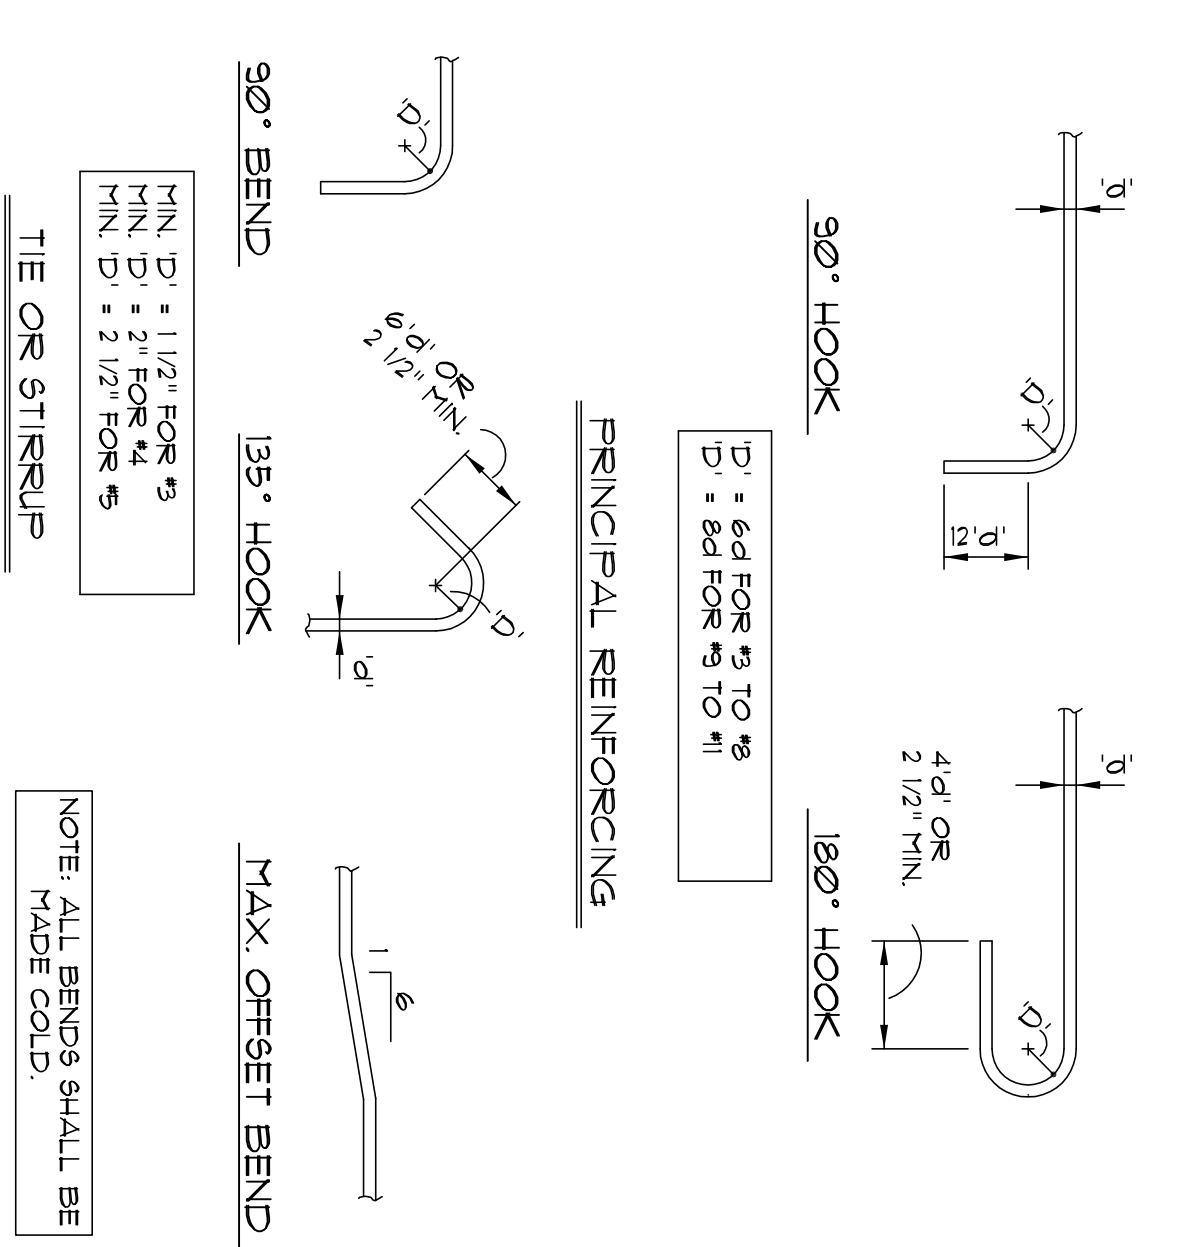


4 TYPICAL REINFORCING BAR BENDS

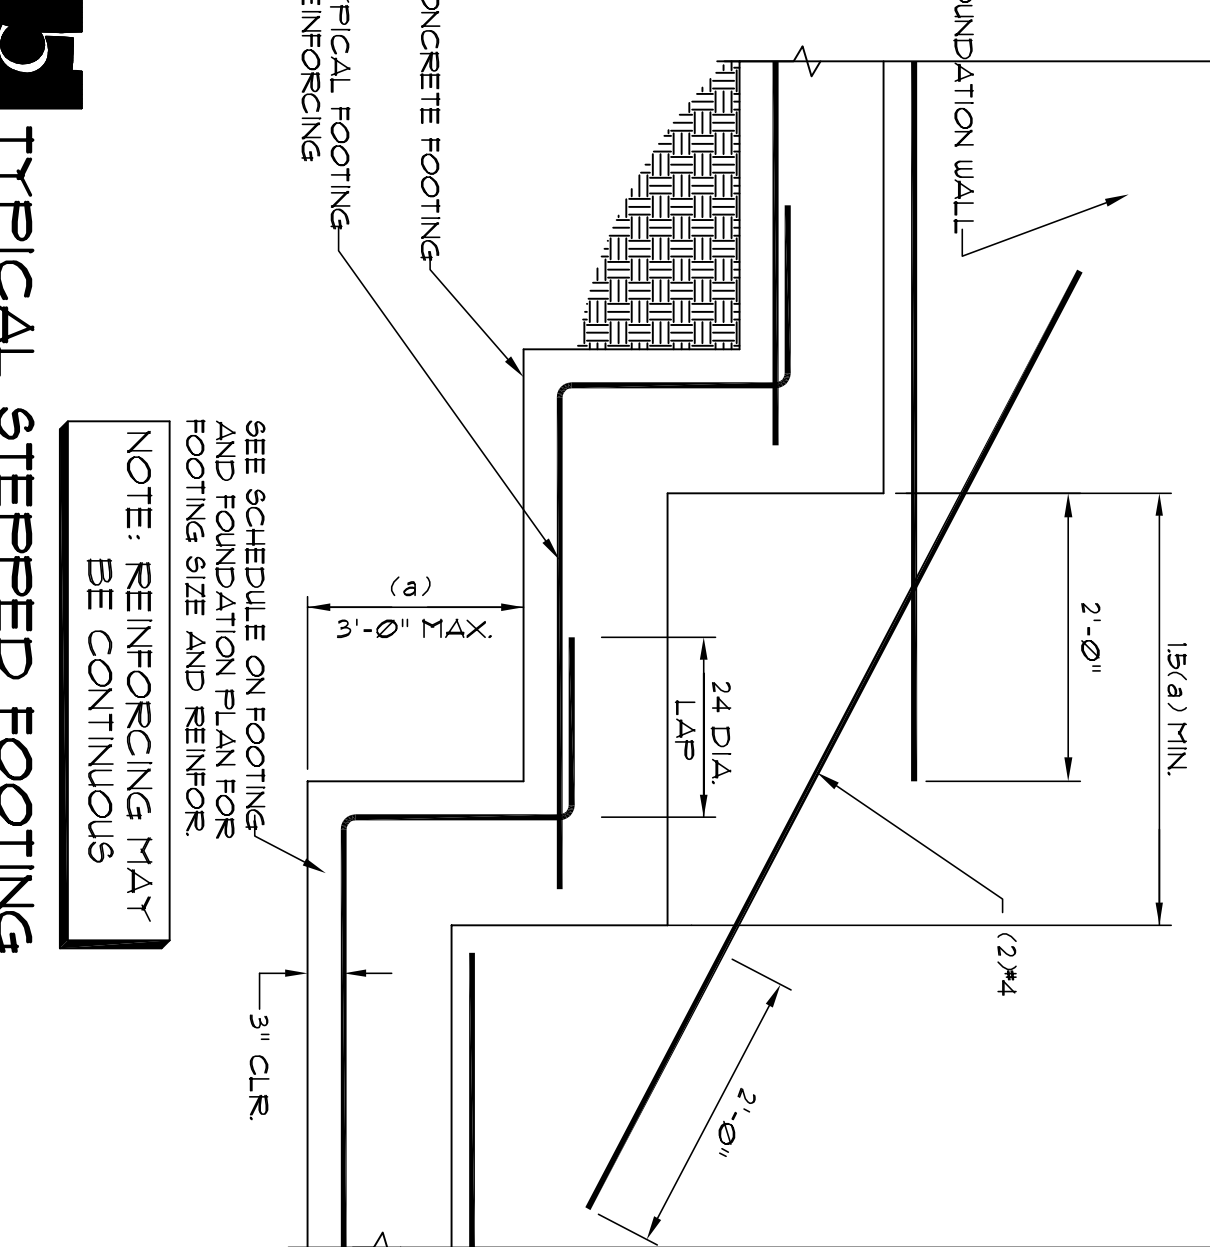


5 TYPICAL STEPPED FOOTING

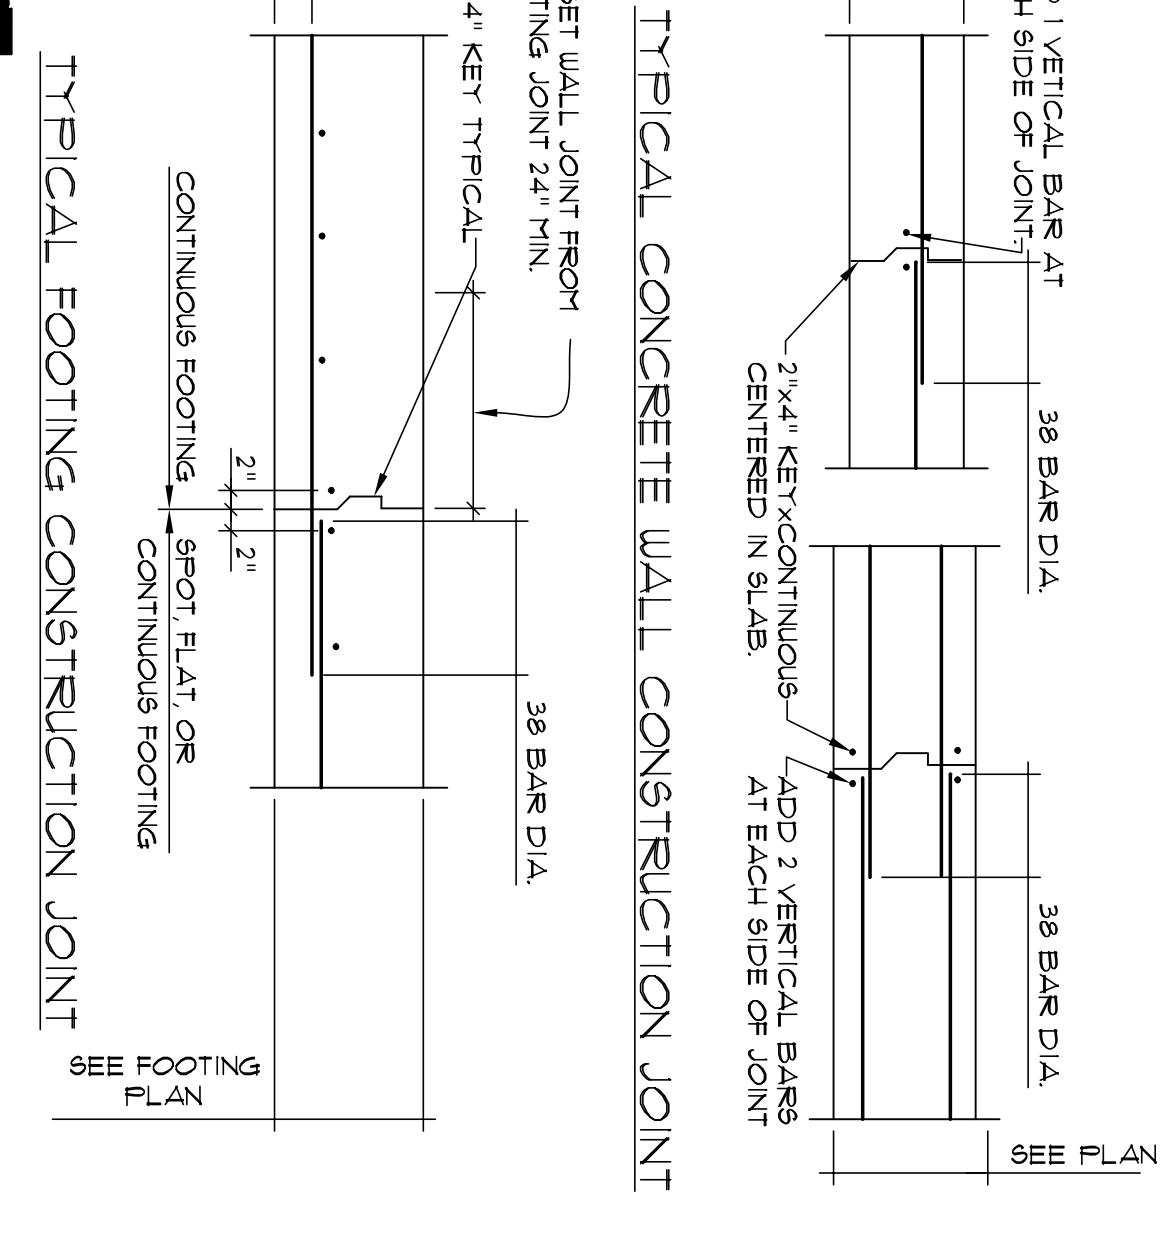


6 TYP. FTG. & WALL CONSTRUCTION JOINT

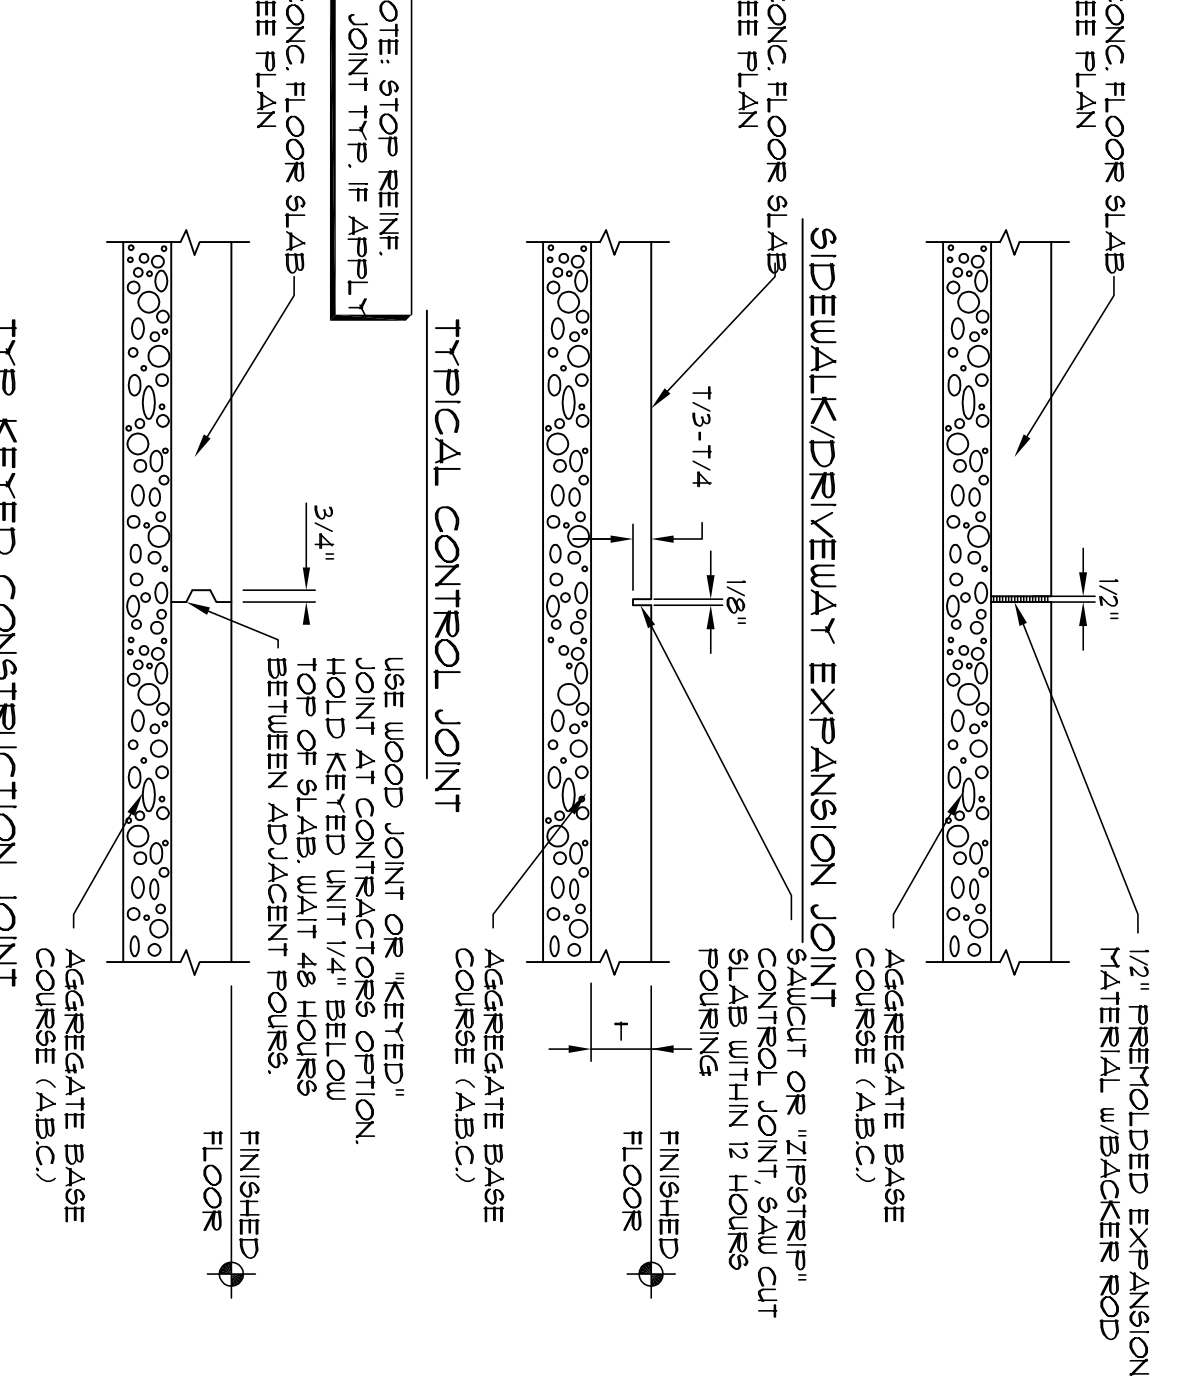

1 TYPICAL CONCRETE FLOOR JOINTS

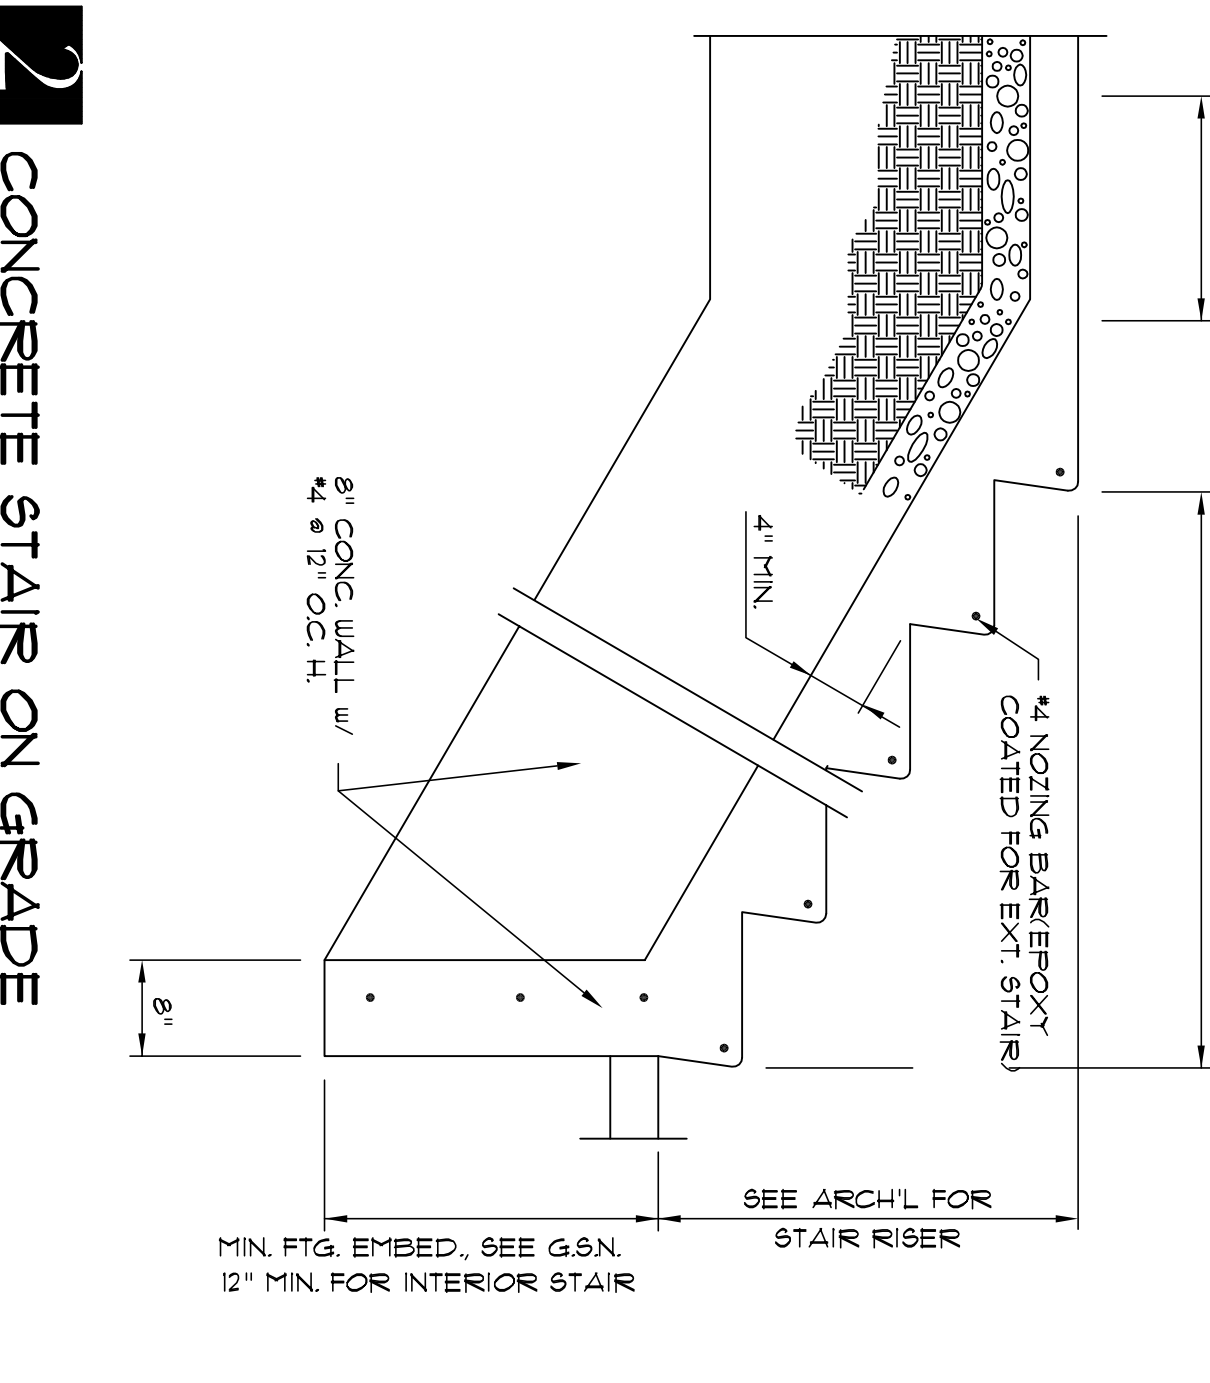

2 CONCRETE STAIR ON GRADE

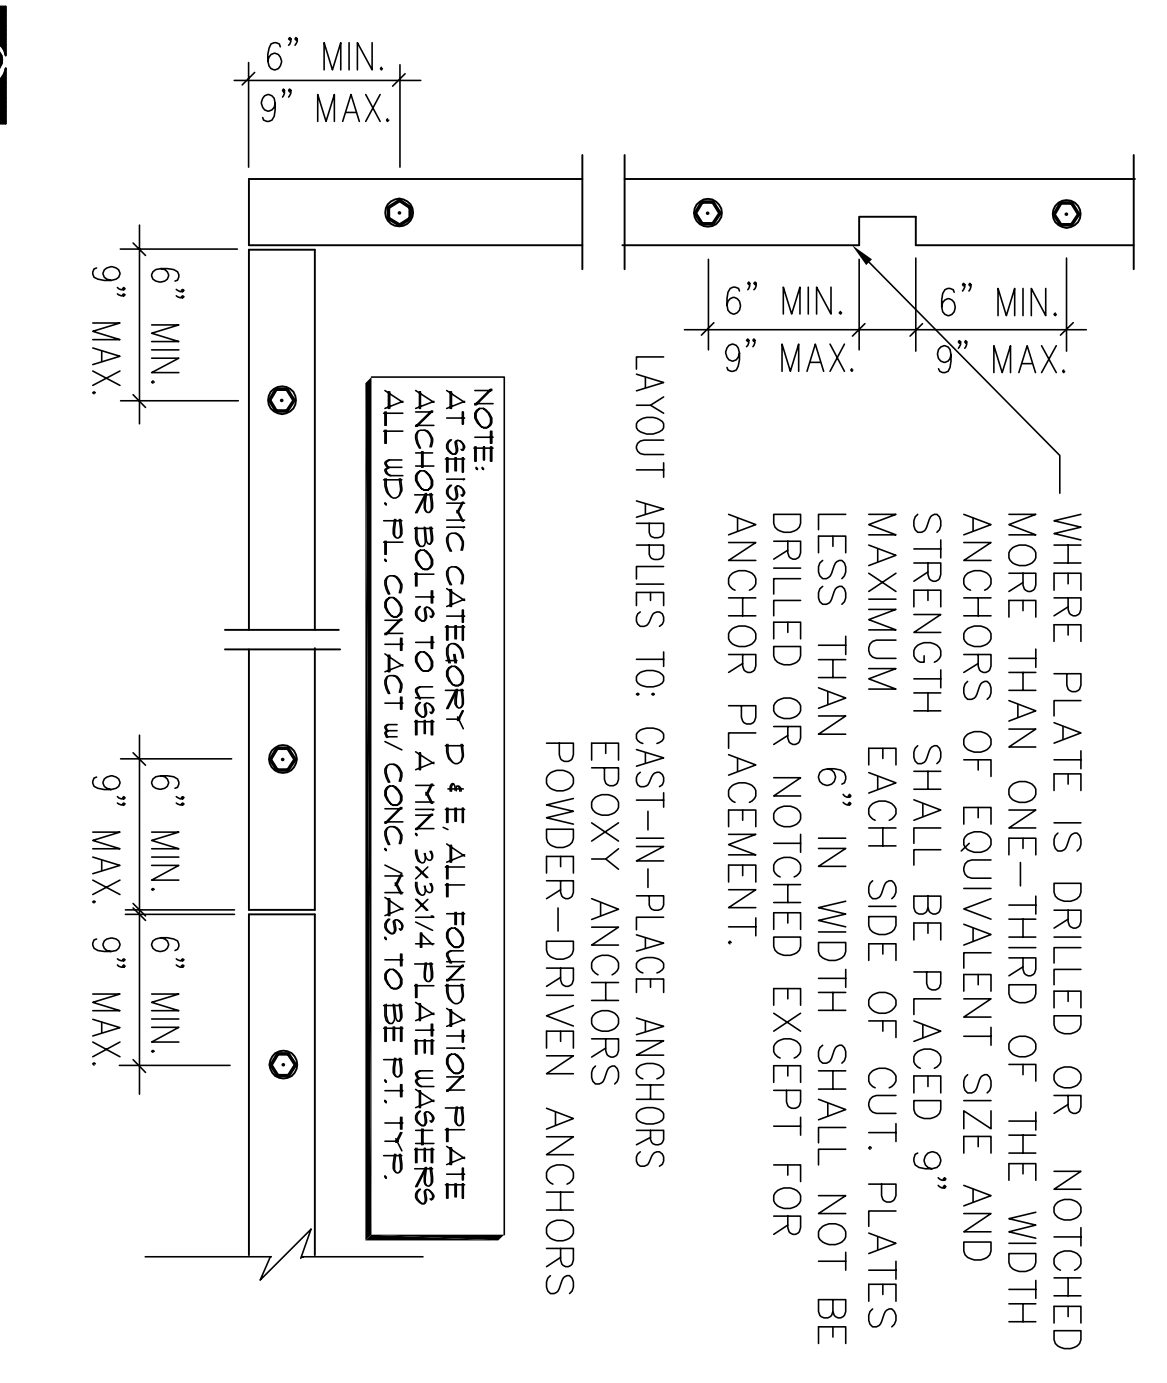

3 TYPICAL ANCHOR BOLTS LAYOUT